



NEXCOM International Co., Ltd.

Network and Communication Solutions

Desktop Telecom Appliance

DTA1160

User Manual

CONTENTS

Preface

Copyright	iv
Disclaimer	iv
Acknowledgements	iv
Regulatory Compliance Statements	iv
Declaration of Conformity	iv
RoHS Compliance	v
Warranty and RMA	vi
Safety Information	viii
Installation Recommendations	viii
Safety Precautions	ix
Technical Support and Assistance	x
Conventions Used in this Manual	x
Global Service Contact Information	xi
Package Contents	xiii
Ordering Information	xiv

Chapter 1: Product Introduction

Overview	1
Key Features	1
Hardware Specifications	2
Knowing Your DTA1160	3
Front Panel	3
Rear Panel	3

Chapter 2: Jumpers and Connectors

Before You Begin	4
Precautions	4
Jumper Settings	5
Locations of the Jumpers and Connectors	6
Jumpers	7
RTC Clear	7
PMC Clear	7
Flash Security Override (IERR)	8
ME Recover Mode	8
Connector Pin Definitions	9
External I/O Interfaces	9
12V DC Input	9
Reset Button	9
Power Button	10
SW (Programmable)/SATA/System/Power LED Indicators	10
RJ45 Console Port (RS232)	11
Dual USB 3.0 Port	11
Dual SFP+ Slot (LAN1 & LAN2)	12
LAN 3 and LAN 4 Ports (ETH2 and ETH3)	13
LAN 5 and LAN 6 Ports (ETH4 and ETH5)	14
LAN 7 and LAN 8 Ports (ETH6 and ETH7)	15
Internal Connectors	16
Internal Reset Switch Connector	16
Internal Power Switch Connector	16



ATX 12V Power Connector	17
CPU Fan Connector.....	17
System Fan Connector	18
SATA Power Connector	18
SATA Connector.....	19
SATA Power Connector	19
SATA Connector.....	20
GPIO Connector.....	20
CPLD JTAG Pin Header	21
Debug Mode Pin Header	21
Boundary Scan Pin Header	22
Boundary Scan Pin Header	22
PWM Controller Pin Header	23
Case Open Pin Header	23
Block Diagram	24

BIOS Setup Utility.....	44
Main	44
Advanced	45
Intel RC Setup	55
Security	67
Boot	68
Save & Exit	69

Chapter 3: System Setup

Removing the Chassis Cover	25
Installing a DIMM Memory Module.....	27
Installing an M.2 Module	29
Installing a SATA DOM Module	31
Installing a 2.5" SATA Storage Drive.....	33
Installing a Wi-Fi Module	36
Installing Both the Wi-Fi and M.2 Module	38

Chapter 4: BIOS Setup

About BIOS Setup.....	41
When to Configure the BIOS.....	41
Default Configuration	42
Entering Setup	42
Legends	42

PREFACE

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexcom.com>. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

DTA1160 is a trademark of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class B devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

RoHS Compliance



NEXCOM RoHS Environmental Policy and Status Update

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2011/65/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force in to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2013 will be RoHS compliant. They will use the usual NEXCOM naming convention.

Warranty and RMA

NEXCOM Warranty Period

NEXCOM manufactures products that are new or equivalent to new in accordance with industry standard. NEXCOM warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NEXCOM. HCP series products (Blade Server) which are manufactured by NEXCOM are covered by a three year warranty period.

NEXCOM Return Merchandise Authorization (RMA)

- Customers shall enclose the “NEXCOM RMA Service Form” with the returned packages.
- Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the “NEXCOM RMA Service Form” for the RMA number apply process.
- Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NEXCOM is not responsible for the devices/parts.
- Customers are responsible for the safe packaging of defective products, making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as “Out of Warranty.”
- Any products returned by NEXCOM to other locations besides the customers’ site will bear an extra charge and will be billed to the customer.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

System Level

- Component fee: NEXCOM will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- Items will be replaced with NEXCOM products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- Replace with 3rd party products if needed.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Board Level

- Component fee: NEXCOM will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection to protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by skilled person.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. Do not place heavy objects on the equipment.
16. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
17. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**

"ATTENTION: Risque d'explosion si la batterie est remplacée par un type incorrect. Mettre au rebus les batteries usagées selon les instructions."
18. This equipment is not suitable for use in locations where children are likely to be present.

Cet équipement ne convient pas à une utilisation dans des lieux pouvant accueillir des enfants.
19. Suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75.

Peut être installé dans des salles de matériel de traitement de l'information conformément à l'article 645 du National Electrical Code et à la NFPA 75.
20. Use certified and rated Laser Class I for Optical Transceiver product.

Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at www.nexcom.com.
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
 - Product name and serial number
 - Detailed information of the peripheral devices
 - Detailed information of the installed software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wordings of the error messages

Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.

Conventions Used in this Manual



Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



Caution:

Information to avoid damaging components or losing data.



Note:

Provides additional information to complete a task easily.

Global Service Contact Information

Headquarters

NEXCOM International Co., Ltd.

9F, No. 920, Chung-Cheng Rd.,
ZhongHe District, New Taipei City, 23586,
Taiwan, R.O.C.

Tel: +886-2-8226-7786

Fax: +886-2-8226-7782

www.nexcom.com

Asia

Taiwan

NexAIoT Co., Ltd.

Taipei Office

13F, No.920, Chung-Cheng Rd.,
ZhongHe District,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7796

Fax: +886-2-8226-7792

Email: sales@nexcom.com.tw

www.nexcom.com.tw

NexAIoT Co., Ltd.

Taichung Office

16F, No.250, Sec. 2, Chongde Rd.,
Beitun Dist.,

Taichung City 406, R.O.C.

Tel: +886-4-2249-1179

Fax: +886-4-2249-1172

Email: sales@nexcom.com.tw

www.nexcom.com.tw

NexCOBOT Taiwan Co., Ltd.

13F, No.916, Chung-Cheng Rd.,
ZhongHe District,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7796

Fax: +886-2-8226-7792

Email: sales@nexcom.com.tw

www.nexcom.com.tw

GreenBase Technology Corp.

13F, No.922, Chung-Cheng Rd.,
Zhonghe Dist.,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7786

Fax: +886-2-8226-7900

Email: sales@nexcom.com.tw

www.nexcom.com.tw

China

NEXSEC Incorporated

Floor 5, No.4, No.7 fengxian middle Rd.,
(Beike Industrial Park), Haidian District,
Beijing, 100094, China

Tel: +86-10-5704-2680

Fax: +86-10-5704-2681

Email: sales@nexcom.cn

www.nexcom.cn

NEXCOM Shanghai

Room 603/604, Huiyinmingzun Plaza Bldg., 1,
No. 609, Yunlin East Rd.,
Shanghai, 200062, China
Tel: +86-21-5278-5868
Fax: +86-21-3251-6358
Email: sales@nexcom.cn
www.nexcom.cn

NEXCOM Surveillance Technology Corp.

Floor 5, Building C, ZhenHan Industrial Zone,
GanKeng Community, Buji Street,
LongGang District,
ShenZhen, 518112, China
Tel: +86-755-8364-7768
Fax: +86-755-8364-7738
Email: steveyang@nexcom.com.tw
www.nexcom.cn

NEXCOM United System Service

Room 603/604, Huiyinmingzun Plaza Bldg. 1,
No. 609, Yunlin East Rd.,
Shanghai, 200062, China
Tel: +86-21-5278-5868
Fax: +86-21-3251-6358
Email: renwang@nexcom.com.tw
www.nexcom.cn

NEXGOL

1st Floor, Building B4, Electronic 2nd Area,
(Phoenix Lake Industrial Park), Yongchuan Dist.,
Chongqing City, 402160, China
Tel: +86-23-4960-9080
Fax: +86-23-4966-5855
Email: sales@nexcobot.com
www.nexgol.com/NexGoL

Beijing NexGemo Technology Co.,Ltd.

5th Floor, Gemotech Building, No.1, Development Rd.,
Changping International Information Industry Base,
Changping District,
Beijing, 102206, China
Tel: +86-10-8190-9399
Fax: +86-10-8190-9456

Japan**NEXCOM Japan**

9F, Tamachi Hara Bldg.,
4-11-5, Shiba Minato-ku,
Tokyo, 108-0014, Japan
Tel: +81-3-5419-7830
Fax: +81-3-5419-7832
Email: sales@nexcom-jp.com
www.nexcom-jp.com

Europe**United Kingdom
NEXCOM EUROPE**

10 Vincent Avenue,
Crownhill Business Centre,
Milton Keynes, Buckinghamshire
MK8 0AB, United Kingdom
Tel: +44-1908-267121
Fax: +44-1908-262042
Email: sales.uk@nexcom.eu
www.nexcom.eu

**America
USA****NEXCOM USA**

2883 Bayview Drive,
Fremont CA 94538, USA
Tel: +1-510-656-2248
Fax: +1-510-656-2158
Email: sales@nexcom.com
www.nexcom.com

Package Contents

Before continuing, verify that the DTA1160 package that you received is complete. Your package should have all the items listed in the following table.

Item	Part Number	Name	Description	Qty
1	19TA0116000X0	DTA1160 ASSY		1
2	6012200052X00	PE Zipper Bag #8	170x240mm, w/China RoHS Symbol	1
3	6012200053X00	PE Zipper Bag #3	100x70mm, w/China RoHS Symbol	1
4	50311F0638X00	I Head Screw Long Fei:I M3x3 ISO	I M3x3mm HEAD:DIA 6.0 ISO NI	1
5	50344C0278X00	Copper Post Long Fei	With Male/Female (Female) 3.25mm (Male) 5mm x M3	1
6	50333F0014X00	Washer M4 Long Fei:4x8x1	Black Iron M4x8x1	1
7	6023309081X00	Cable EDI:232091081804-RS	COM Port. DB9 Female to RJ45 8P8C L:1800mm	1
8	5044440031X00	Rubber Foot Kang Yang:RF20-5-4P	19.8x18x5.0mm	4
9	7400060040X00	Power Adapter CWT:E99-KPL060F-L024	60W 12.0V/5.0A	1
10	6014402279X00	DTA1160 Membrane VER:A Greatwood:GW_00010417	209.4x33.4x0.55mm	1
11	6014605594X00	Outside Carton Label for DTA1160 VER:A Label Jet	60x60mm ART Paper	1

Ordering Information

The following below provides ordering information for DTA1160.

Barebone

DTA1160 (P/N: 10TA0116000X0)

Intel Atom® C3758 base, 8 cores, BGA type, 4 DDR4 memory slots, 6 copper LAN ports, 2 x SFP+ fiber ports, 2 x USB 3.0 ports, 2.5" SSD bay

CHAPTER 1: PRODUCT INTRODUCTION

Overview



Key Features

- Intel Atom® C3000 SoC 8~16 cores, BGA type
- Quick assist: up to 20Gbps crypto
- Virtualization: Intel® VT-x, Intel® VT-d, SR-IOV, VMDq
- DDR4-2400 ECC or non-ECC UDIMM, max.64GB
- Support 2 x 10GbE SFP+ ports and 6 x 1GbE LAN ports
- One internal 2.5" SSD bay, on-board eMMC 5.0
- 2 x USB 3.0 connector
- TPM 1.2/2.0 supported

Hardware Specifications

Main Board

- DTB1160
- Intel Atom® C3000 series, BGA type

Main Memory

- 4 x DDR4-2400 ECC or non-ECC DIMM sockets; max.64GB

LAN Features

- 2 x 10GbE SFP+ ports
- 4 x 1GbE RJ45 copper ports: from Intel® i350 -AM4
- 2 x 1GbE RJ45 copper ports: from Marvell PHY

Storage

- 1 x 2.5" SATA HDD/SSD bay (internal)
- 1 x SATA connector (for SATA DOM)
- 1 x M.2 2242 SSD socket (SATA & NVMe)

Expansion

- Proprietary PCIe socket supporting LTE module, WAN/LAN IO module
- 1 x M.2 2230 slot for Wi-Fi module (E key)

I/O Interface-Front

- 2 x USB 3.0 ports (5V/1A)
- 1 x RJ45 type console port
- 2 x SFP+ ports
- 6 x Copper ports
- 1 x Power button; 1 x Reset button

- 1 x 4 green LED indicators: power status/HDD status/system status/user define (all LEDs are programmable)
- DC jack with lock (12V/5A)

I/O Interface-Rear

- 3 x SMA connector holes for RF cable

Power Input

- 60W power adapter

Dimensions

- Chassis dimension: 220 x 241 x 44 (mm)
- Carton dimension: 421 x 291 x 160 (mm)

Weight


- Without packing: 1.9kg
- With packing: 3.2kg

Certifications

- CE approval
- FCC Class B
- UL

Knowing Your DTA1160

Front Panel

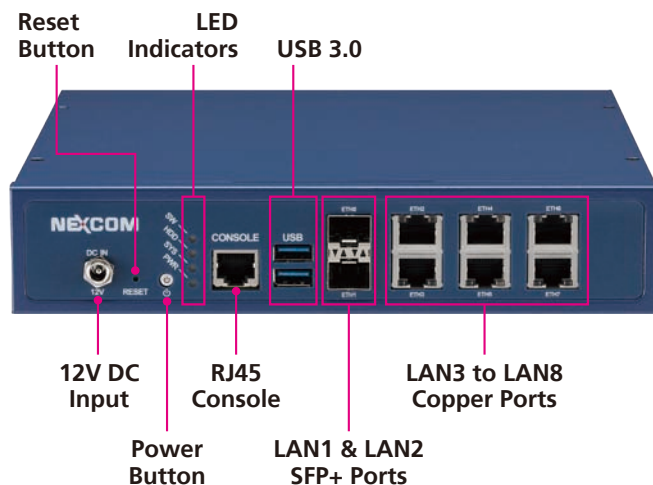

12V DC Input

Used to plug a DC power cord.

Reset Button

Press to restart the system.

Power Button

Press to power-on or power-off the system.

LED Indicators (SW/HDD/SYS/PWR)

Indicates the hard drive (SW), system status (SYS) and power status (PWR) of the system. The SW LED is user programmable.

RJ45 Console Port

Used to connect to devices with RJ45 type console connection.

USB 3.0 Ports

Used to connect USB 3.0/2.0 devices.

LAN 1 (ETH0) to LAN 2 (ETH1) SFP+ Ports

Used to connect SFP+ modules for connecting fiber optic network devices.


LAN 3 (ETH2) to LAN 8 (ETH7) Copper Ports

Used to connect network devices.

Antenna Holes

Used to mount and connect external antennas.

Rear Panel

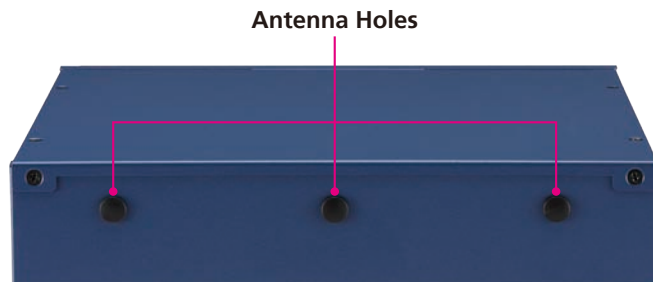

CHAPTER 2: JUMPERS AND CONNECTORS

This chapter describes how to set the jumpers and connectors on the DTA1160 motherboard.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
 - A Philips screwdriver
 - A flat-tipped screwdriver
 - A set of jewelers screwdrivers
 - A grounding strap
 - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic components. Humid environments tend to have less static electricity than

dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:


- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.

Jumper Settings


A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is short. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is open.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)

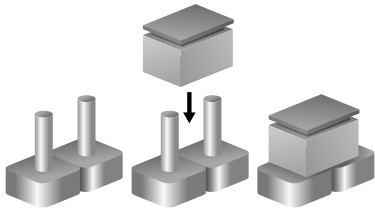


Three-Pin Jumpers: Pins 1 and 2 are Short

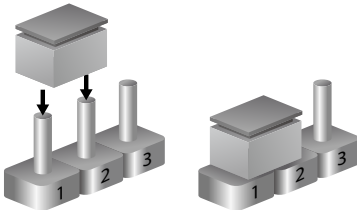

Locations of the Jumpers and Connectors

The figure below shows the location of the jumpers and connectors.

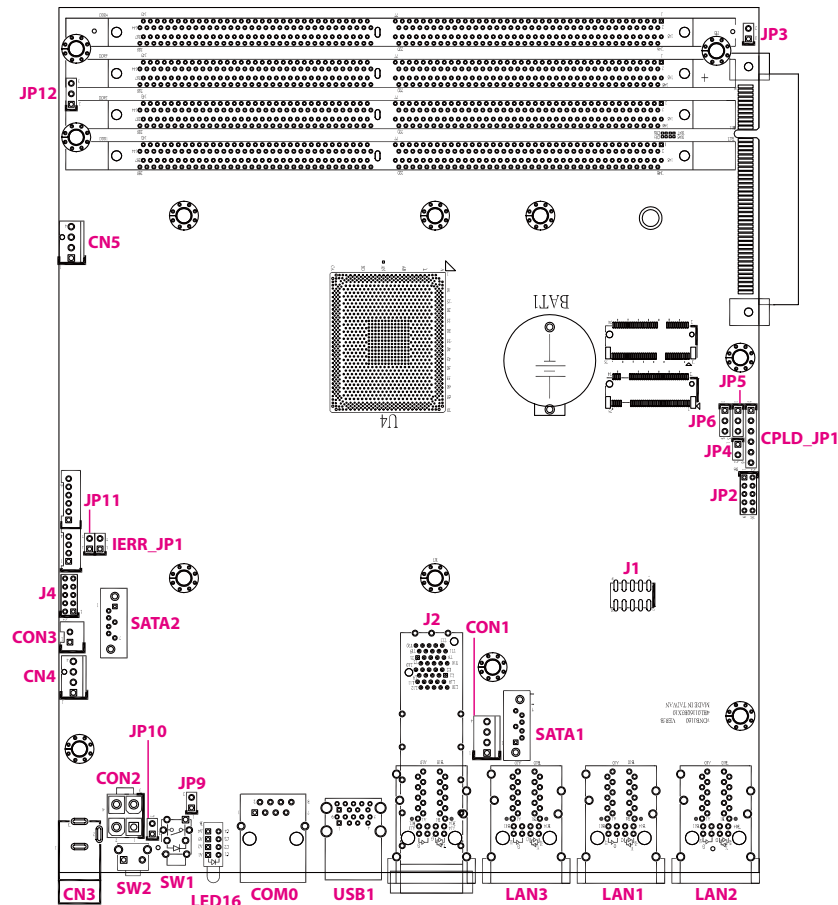

Jumpers

RTC Clear

Connector type: 1x3 3-pin header

Connector location: JP5



Pin	Function
1-2	Normal
2-3	Clear CMOS

PMC Clear

Connector type: 1x3 3-pin header

Connector location: JP6



Pin	Function
1-2	Normal
2-3	Clear PMC

Flash Security Override (IERR)

Connector type: 1x2 2-pin header

Connector location: IERR_JP1



Pin	Function
NC	Flash descriptor security locked (Default)
1-2	Flash descriptor security unlocked - requires external pull-up

ME Recover Mode

Connector type: 1x2 2-pin header

Connector location: JP11



Pin	Function
NC	Normal (Default)
1-2	ME Recover Mode

Connector Pin Definitions

External I/O Interfaces

12V DC Input


Connector location: CN3



Pin	Definition
1	GND
2	GND
3	DC_IN

Reset Button

Connector location: SW2

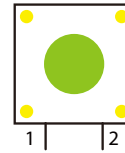

Pin	Definition
1	GND
2	RW_SW_RST

Power Button

Connector location: SW1



Pin	Definition	Pin	Definition
1	PWR_BTN_CAL_N	2	GND
3	GND	4	PWR_BTN_CAL_N

SW (Programmable)/SATA/System/Power LED Indicators

Connector location: LED16


-  SW
-  HDD
-  SYS
-  PWR

Pin	Definition	Pin	Definition
C1	CPLD_FAN_OK	A1	GND
C2	HDD1_LED	A2	GND
C3	CPLD_SYS_OK	A3	GND
C4	CPLD_PWR_OK	A4	GND

RJ45 Console Port (RS232)

Connector type: RJ45 port

Connector location: COM0

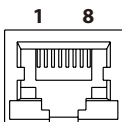


Pin	Definition	Pin	Definition
1	SP_RTS1	2	SP_DTR1
3	SP_TXD1	4	GND
5	SP_DCD1	6	SP_RXD1
7	SP_DSR1	8	SP_CTS1

Dual USB 3.0 Port

Connector type: USB 3.0 ports, Type A

Connector location: USB1

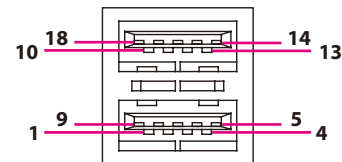


Pin	Definition	Pin	Definition
1	P5V_USB	2	USB2_P0-
3	USB2_P0+	4	GND
5	USB3_RX_D0-	6	USB3_RX_D0+
7	GND	8	USB3_TX_D0-
9	USB3_TX_D0+	10	P5V_USB
11	USB2_P1-	12	USB2_P1+
13	GND	14	USB3_RX_D1-
15	USB3_RX_D1+	16	GND
17	USB3_TX_D1-	18	USB3_TX_D1+

Dual SFP+ Slot (LAN1 & LAN2)

Connector type: SFP+ slots

Connector location: J2

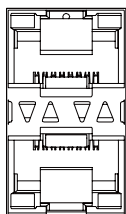

SFP+ Port 1

SFP+ Port 2

SFP+ Port 1

Pin	Definition	Pin	Definition
L1	GND	L2	TxFault1
L3	TxDisable1	L4	P10G_Sda1
L5	P10G_Scl1	L6	ModABS1_L
L7	1_RS0	L8	RxLOS1
L9	1_RS1	L10	GND
L11	GND	L12	1_SFP+_RD-
L13	1_SFP+_RD+	L14	GND
L15	3P3V_SFP1_R	L16	3P3V_SFP1_T
L17	GND	L18	1_SFP+_TD+
L19	1_SFP+_TD-	L20	GND


SFP+ Port 2

Pin	Definition	Pin	Definition
L1	GND	L2	TxFault2
L3	TxDisable2	L4	P10G_Sda2
L5	P10G_Scl2	L6	ModABS2_L
L7	2_RS0	L8	RxLOS2
L9	2_RS1	L10	GND
L11	GND	L12	2_SFP+_RD-
L13	2_SFP+_RD+	L14	GND
L15	3P3V_SFP2_R	L16	3P3V_SFP2_T
L17	GND	L18	2_SFP+_TD+
L19	2_SFP+_TD-	L20	GND

LAN 3 and LAN 4 Ports (ETH2 and ETH3)

Connector type: RJ45 with LEDs

Connector location: LAN3

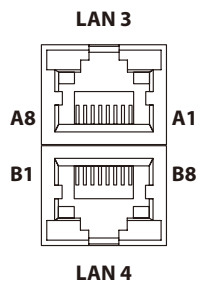


Pin	Definition	Pin	Definition
A1	PA_MDIOP_T	A2	PA_MDION_T
A3	PA_MDI1P_T	A4	PA_MDI1N_T
A5	PA_MDI2N_T	A6	PA_MDI2P_T
A7	PA_MDI3N_T	A8	PA_MDI3P_T
A9	GND	A10	GND
A11	P3V3	A12	1512_ActLed
A13	P3V3	A14	1512_LinkLed
MH1	CGND	MH2	CGND
MH3	CGND		

Pin	Definition	Pin	Definition
B1	PB_MDIOP_T	B2	PB_MDION_T
B3	PB_MDI1P_T	B4	PB_MDI1N_T
B5	PB_MDI2N_T	B6	PB_MDI2P_T
B7	PB_MDI3N_T	B8	PB_MDI3P_T
B9	GND	B10	GND
B11	P3V3	B12	1514_ActLed
B13	P3V3	B14	1514_LinkLed
MH4	CGND	MH5	CGND
MH6	CGND		

LAN 5 and LAN 6 Ports (ETH4 and ETH5)

Connector type: RJ45 with LEDs

Connector location: LAN1

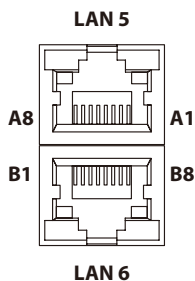


Pin	Definition	Pin	Definition
A1	PORT1_DMI0P_T	A2	PORT1_DMION_T
A3	PORT1_DMI1P_T	A4	PORT1_DMI1N_T
A5	PORT1_DMI2P_T	A6	PORT1_DMI2N_T
A7	PORT1_DMI3P_T	A8	PORT1_DMI3N_T
A9	GND	A10	GND
A11	P3V3_A	A12	PORT1_ACT_N
A13	PORT1_L100_N	A14	PORT1_L1000_N
MH1	CGND	MH2	CGND
MH3	CGND		

Pin	Definition	Pin	Definition
B1	PORT2_DMI0P_T	B2	PORT2_DMION_T
B3	PORT2_DMI1P_T	B4	PORT2_DMI1N_T
B5	PORT2_DMI2P_T	B6	PORT2_DMI2N_T
B7	PORT2_DMI3P_T	B8	PORT2_DMI3N_T
B9	GND	B10	GND
B11	P3V3_A	B12	PORT2_ACT_N
B13	PORT2_L100_N	B14	PORT2_L1000_N
MH4	CGND	MH5	CGND
MH6	CGND		

LAN 7 and LAN 8 Ports (ETH6 and ETH7)

Connector type: RJ45 with LEDs

Connector location: LAN2

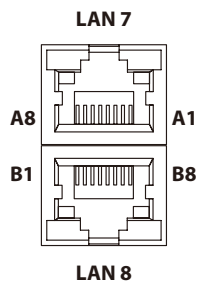

Pin	Definition	Pin	Definition
A1	PORT3_DMI0P_T	A2	PORT3_DMION_T
A3	PORT3_DMI1P_T	A4	PORT3_DMI1N_T
A5	PORT3_DMI2P_T	A6	PORT3_DMI2N_T
A7	PORT3_DMI3P_T	A8	PORT3_DMI3N_T
A9	GND	A10	GND
A11	P3V3_A	A12	PORT3_ACT_N
A13	PORT3_L100_N	A14	PORT3_L1000_N
MH1	CGND	MH2	CGND
MH3	CGND		

Pin	Definition	Pin	Definition
B1	PORT4_DMI0P_T	B2	PORT4_DMION_T
B3	PORT4_DMI1P_T	B4	PORT4_DMI1N_T
B5	PORT4_DMI2P_T	B6	PORT4_DMI2N_T
B7	PORT4_DMI3P_T	B8	PORT4_DMI3N_T
B9	GND	B10	GND
B11	P3V3_A	B12	PORT4_ACT_N
B13	PORT4_L100_N	B14	PORT4_L1000_N
MH4	CGND	MH5	CGND
MH6	CGND		

Internal Connectors

Internal Reset Switch Connector

Connector type: 1x2 2-pin header

Connector location: JP10



Pin	Definition
1	RW_SW_RST
2	GND

Internal Power Switch Connector

Connector type: 1x2 2-pin header

Connector location: JP9




Pin	Definition
1	PWR_BTN_CAL_N
2	GND

ATX 12V Power Connector

Connector type: 2x2 4-pin header

Connector location: CON2

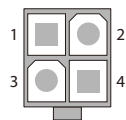


Pin	Definition	Pin	Definition
1	GND	2	GND
3	DC_IN	4	DC_IN

CPU Fan Connector

Connector type: 1x4 4-pin wafer

 Connector location: CN5




Pin	Definition	Pin	Definition
1	GND	2	P12V
3	FAN1_IN_CON	4	FAN1_PWM_OUT

System Fan Connector

Connector type: 1x4 4-pin wafer

 Connector location: CN4




Pin	Definition	Pin	Definition
1	GND	2	P12V
3	FAN2_IN_CON	4	FAN2_PWM_OUT

SATA Power Connector

Connector type: 1x4 4-pin wafer

 Connector location: CON1




Pin	Definition	Pin	Definition
1	P12V	2	GND
3	GND	4	P5V

SATA Connector

Connector type: Standard Serial ATA

 Connector location: SATA1



Pin	Definition	Pin	Definition
1	GND	2	SATA_TX0P_C
3	SATA_TX0N_C	4	GND
5	SATA_RX0N_C	6	SATA_RX0P_C
7	GND		

SATA Power Connector

Connector type: 1x2 2-pin header

Connector location: CON3




Pin	Definition
1	P5V
2	GND

SATA Connector

Connector type: Standard Serial ATA

 Connector location: SATA2




Pin	Definition	Pin	Definition
1	GND	2	SATA_TX1P_C
3	SATA_TX1N_C	4	GND
5	SATA_RX1N_C	6	SATA_RX1P_C
7	GND		

GPIO Connector

Connector type: 2x5 10-pin header

 Connector location: JP2



Pin	Definition	Pin	Definition
1	P5V	2	GND
3	SIO_GPIN1	4	SIO_GPOUT1
5	SIO_GPIN2	6	SIO_GPOUT2
7	SIO_GPIN3	8	SIO_GPOUT3
9	SIO_GPIN4	10	SIO_GPOUT4

CPLD JTAG Pin Header

Connector type: 1x6 6-pin header

Connector location: CPLD_JP1



Pin	Definition	Pin	Definition
1	P3V_STBY	2	GND
3	JTAG_PLD_TCK	4	JTAG_PLD_TDO
5	JTAG_PLD_TDI	6	JTAG_PLD_TMS

Debug Mode Pin Header

Connector type: 1x2 2-pin header

Connector location: JP4




Pin	Definition
1	CPLD_DEBUG_MODE_N
2	GND

Boundary Scan Pin Header

Connector type: 2x5 10-pin header

 Connector location: J4



Pin	Definition	Pin	Definition
1	GND	2	SOC_JTAG_TRST
3	GND	4	SOC_JTAG_TDO
5	JTAG_PWR_SOC	6	SOC_JTAG_TDI
7	GND	8	SOC_JTAG_TMS
9	GND	10	SOC_JTAG_TCK

Boundary Scan Pin Header

Connector type: 2x5 10-pin header

Connector location: J1



Pin	Definition	Pin	Definition
1	GND	2	I350A_JTAG_TRST
3	GND	4	I350A_JTAG_TDO
5	JTAG_PWR_SOC	6	I350A_JTAG_TDI
7	GND	8	I350A_JTAG_TMS
9	GND	10	I350A_JTAG_TCK

PWM Controller Pin Header

Connector type: 1x3 3-pin header
Connector location: JP12



Pin	Function
1	SCL
2	SDA
3	GND


Case Open Pin Header

Connector type: 1x2 2-pin header
Connector location: JP3



Pin	Function
1	SIO_CASEOPEN_N
2	GND

Block Diagram

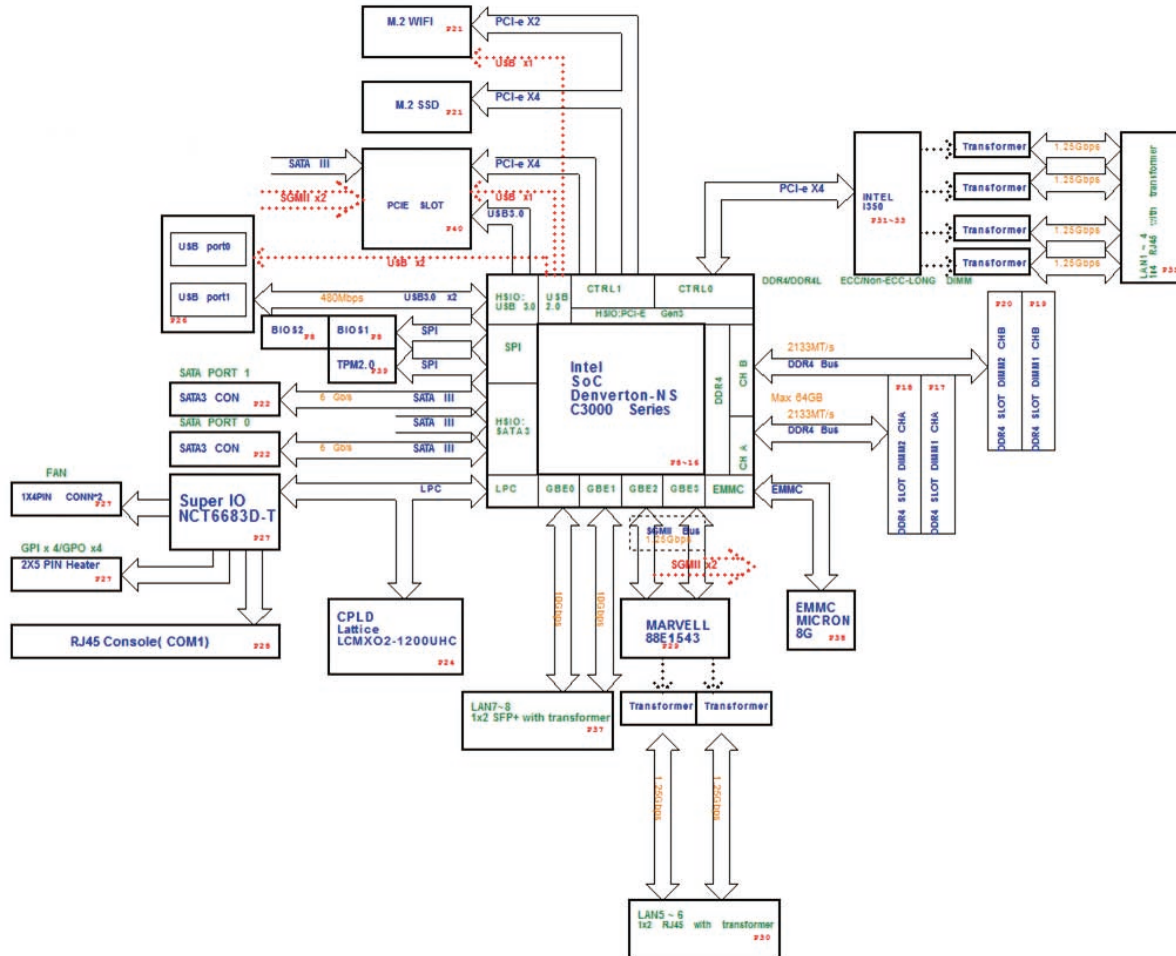

CHAPTER 3: SYSTEM SETUP

Removing the Chassis Cover




Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.

1. The screws around the rear and top of the cover are used to secure the cover to the chassis. Remove these screws and put them in a safe place for later use.




Screws on the rear

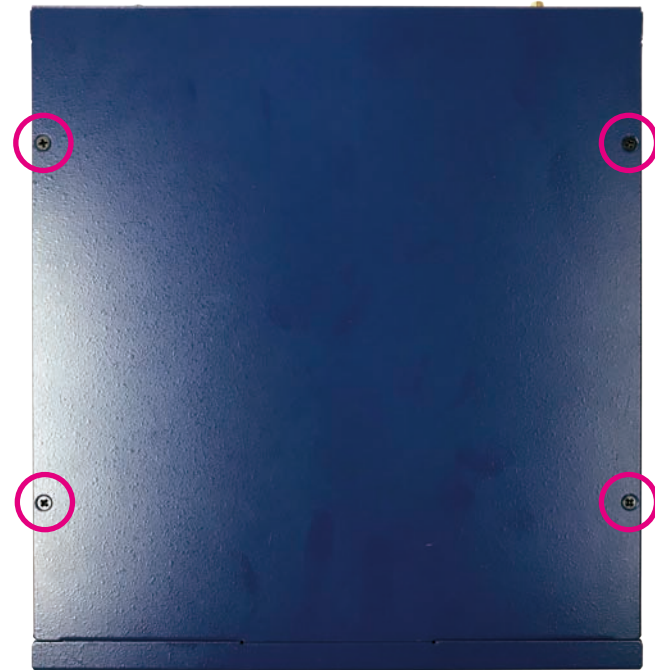



Screws on the top

2. With the screws removed, gently slide the cover outwards then lift up the cover to remove it.

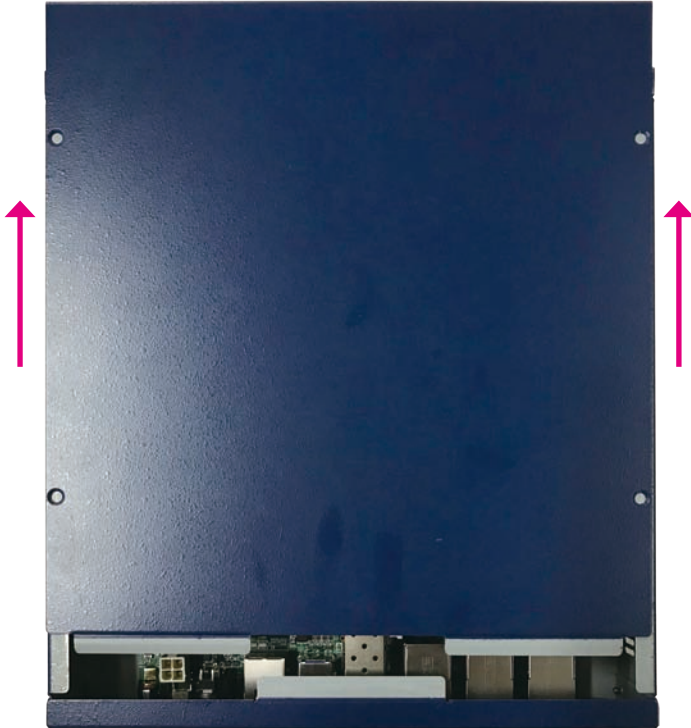


Installing a DIMM Memory Module

1. Locate the DIMM socket on the motherboard and push the ejector tabs which are at the ends of the socket outward. This indicates that the socket is unlocked.
2. Note how the module is keyed to the socket. Grasping the module by its edges, align the module with the socket so that the “notch” on the module is aligned with the “key” on the socket. The key ensures the module can be plugged into the socket in only one direction.

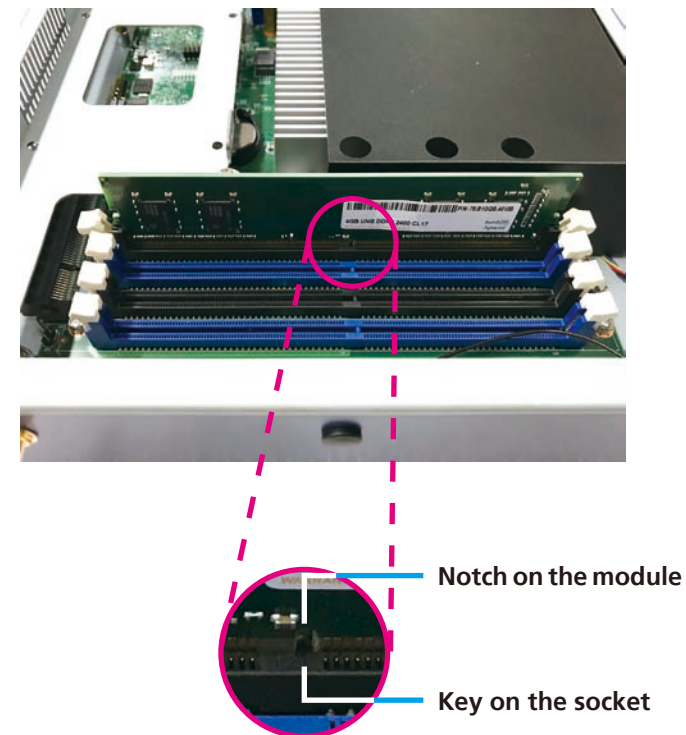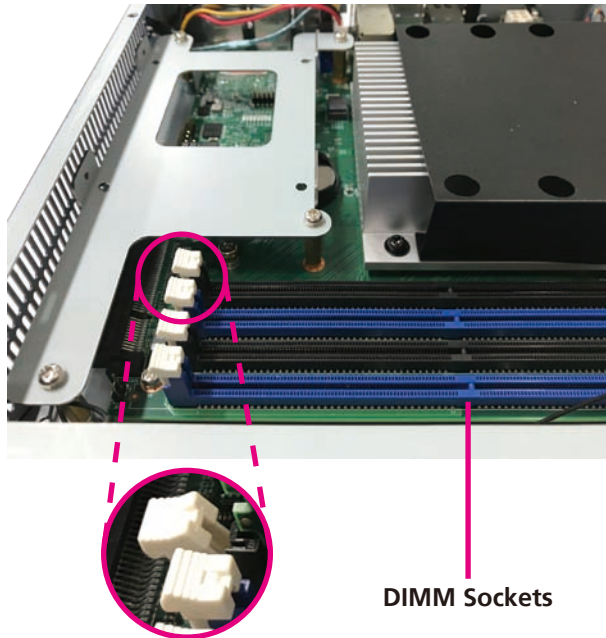


3. Seat the module vertically, pressing it down firmly until it is completely seated in the socket. The ejector tabs at the ends of the socket will automatically snap into the locked position to hold the module in place.

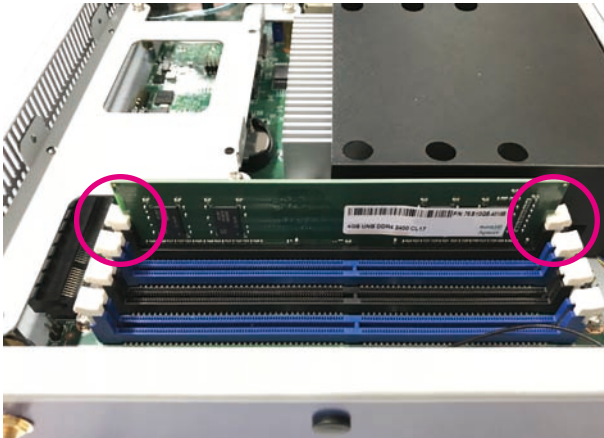


Installing an M.2 Module

1. Locate the M.2 slot on the motherboard and align the washer to the mounting hole used to secure the module.
2. Fasten a copper standoff to the mounting hole through the washer.

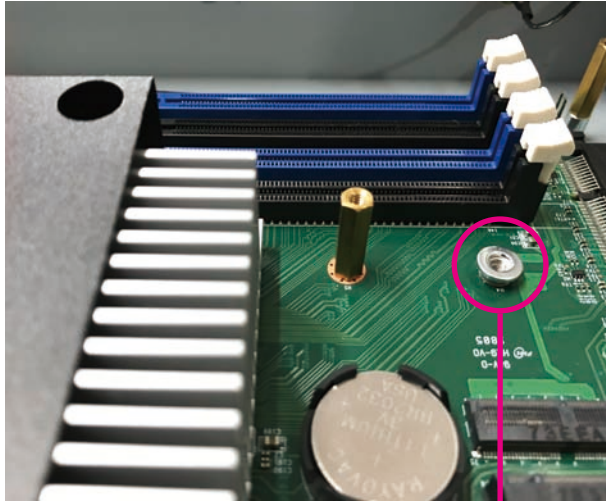


Washer

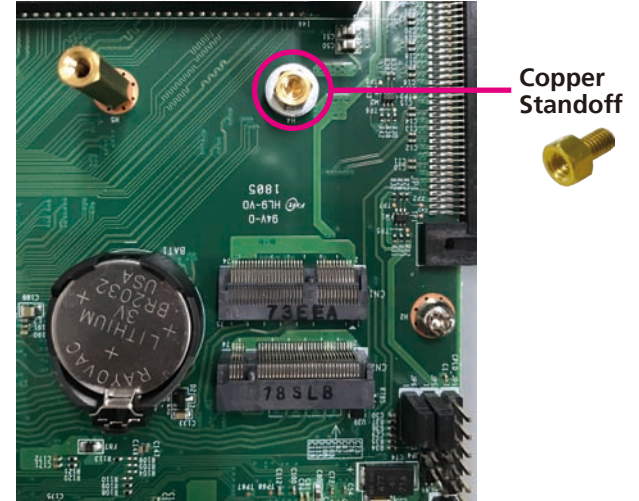


Copper Standoff



3. Insert the module into the slot at a 45 degrees angle until the gold-plated connector on the edge of the module completely disappears inside the slot.

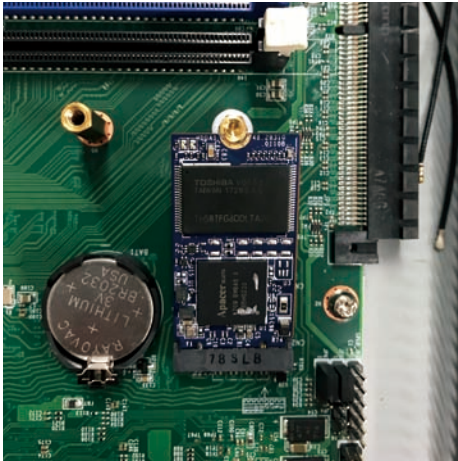

4. Push the module down and fasten a screw into the copper standoff to secure the module.

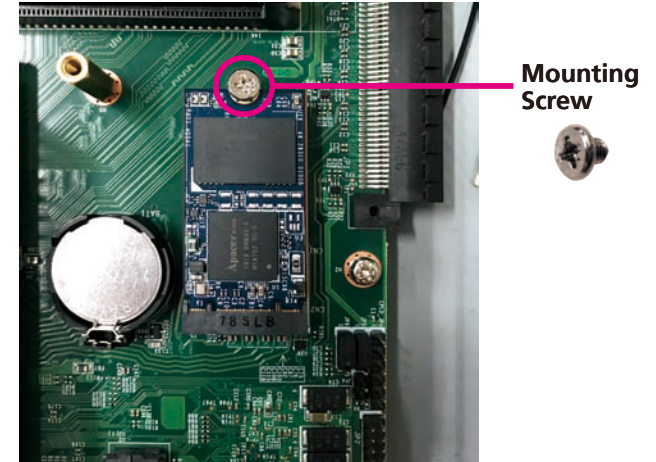

Installing a SATA DOM Module

1. Locate the SATA DOM connector on the motherboard.



SATA DOM
Conconnector

2. Install the SATA DOM module to the connector.



3. Connect the power cable to the SATA DOM power connector on the motherboard and the other end to the SATA DOM module.




Installing a 2.5" SATA Storage Drive




Please correctly follow the below instructions and noted items to avoid making unnecessary damages.


1. The storage drive bracket is used to secure the storage drive to the system.

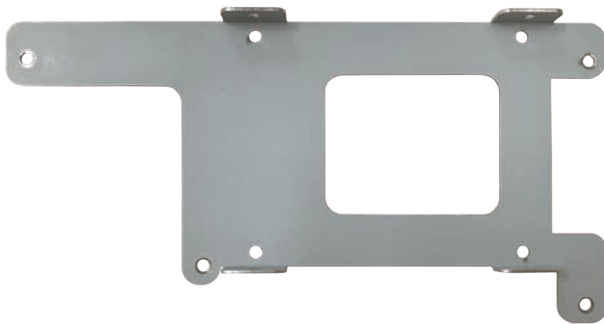


2. Place the SATA storage drive onto the storage drive bracket with the SATA data and power connector facing outwards. Then use the mounting screws to secure the SATA storage drive in place.

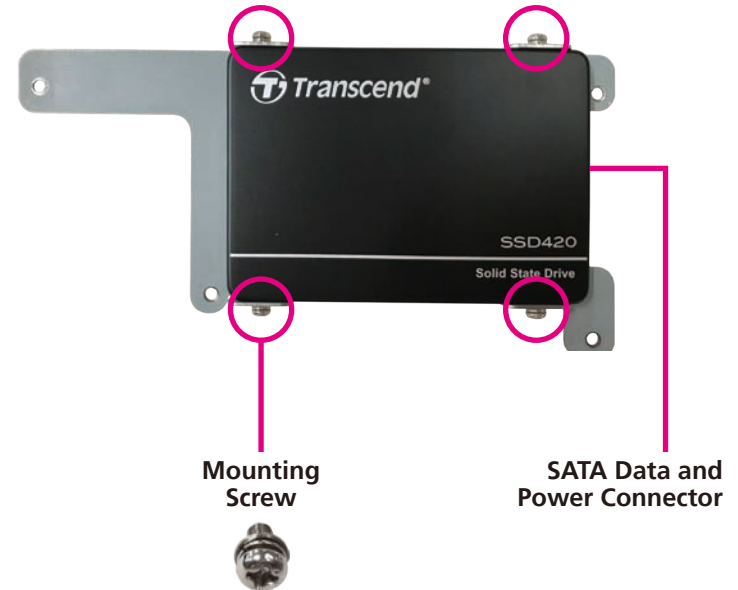


3. Install four copper standoffs to the motherboard and locate the SATA data and power connector on the board.

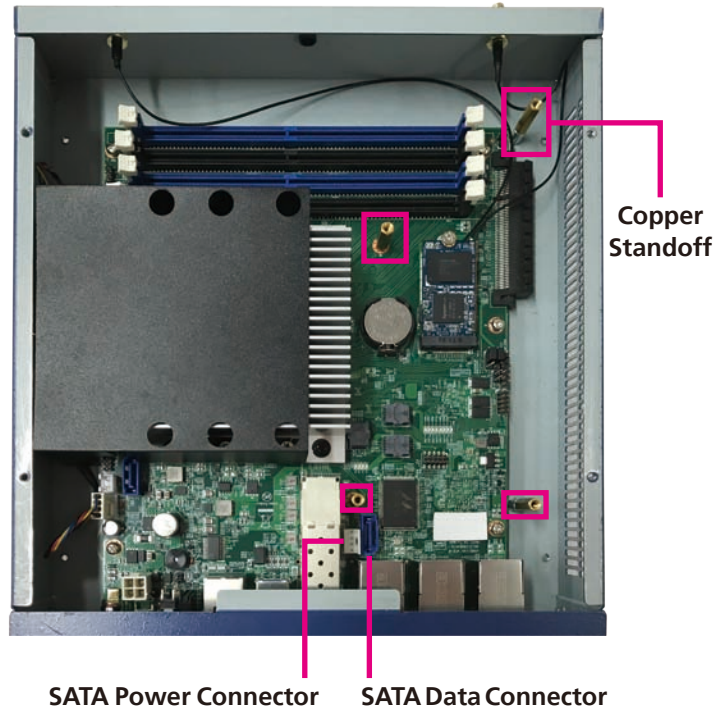

4. Connect the SATA data and power cables to the respective connectors on the motherboard.

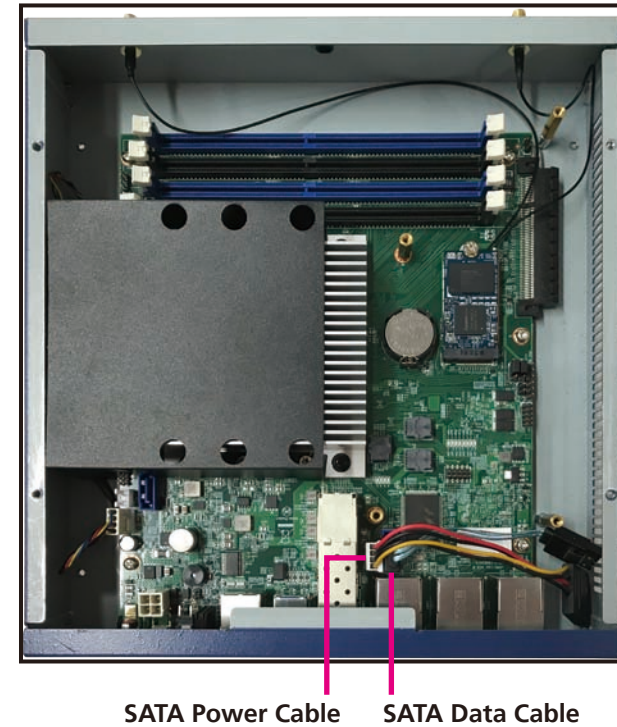


5. Place the storage drive bracket in the chassis with the mounting holes on the bracket aligned to the copper standoffs, and use the mounting screws to secure the bracket in place. Then connect the SATA data and power cables to the respective connectors on the storage drive.

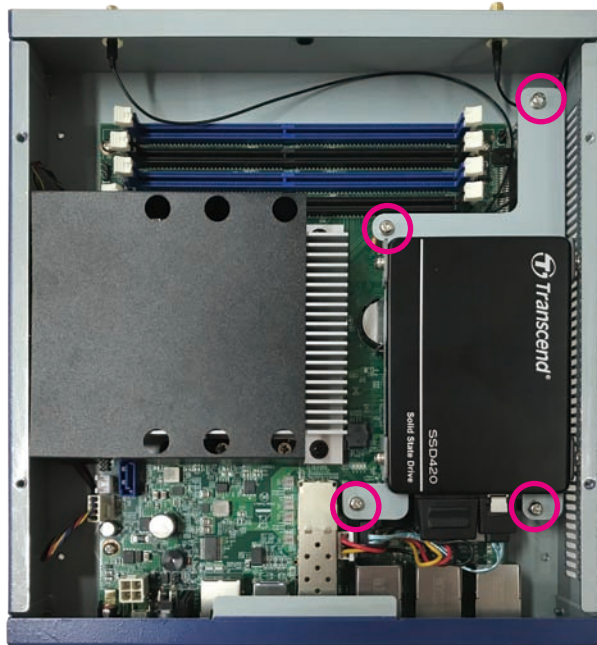

Installing a Wi-Fi Module

1. Locate the Wi-Fi slot on the motherboard.

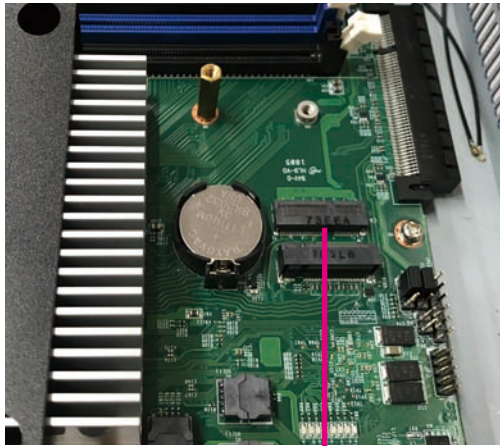


Wi-Fi Slot


2. Insert the module into the slot at a 45 degrees angle until the gold-plated connector on the edge of the module completely disappears inside the slot.



3. Attach the RF cables onto the module and mount the other ends of the cables to the antenna holes on the chassis.

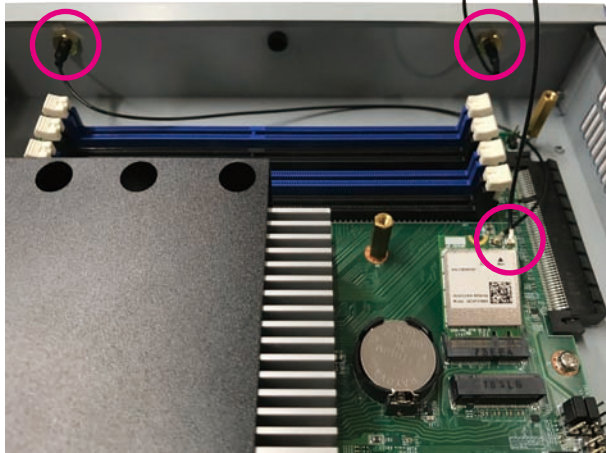

4. Push the module down and fasten a screw into the mounting hole to secure the module.

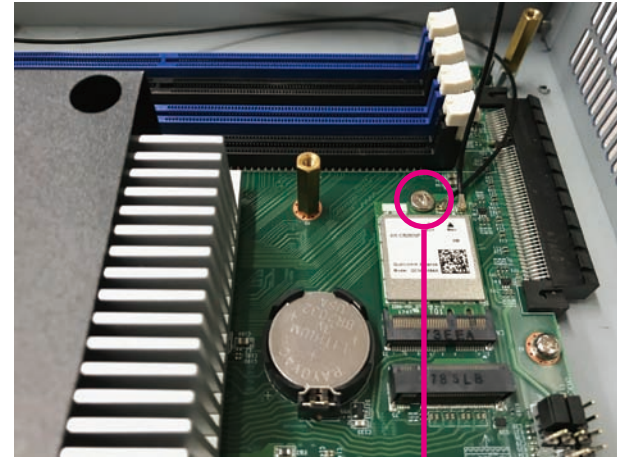

Mounting
Screw




Installing Both the Wi-Fi and M.2 Module



When installing both the Wi-Fi and M.2 module, please install the Wi-Fi module first.

1. Locate the Wi-Fi slot on the motherboard.

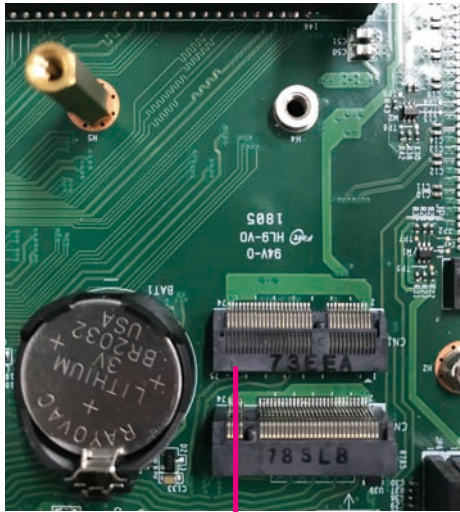

Wi-Fi Slot

2. Insert the Wi-Fi module into the Wi-Fi slot at a 45 degrees angle until the gold-plated connector on the edge of the module completely disappears inside the slot.




3. Push the Wi-Fi module down and fasten a copper standoff to the mounting hole to secure the module.



Copper Standoff




4. Insert the M.2 module into the M.2 slot at a 45 degrees angle until the gold-plated connector on the edge of the module completely disappears inside the slot.

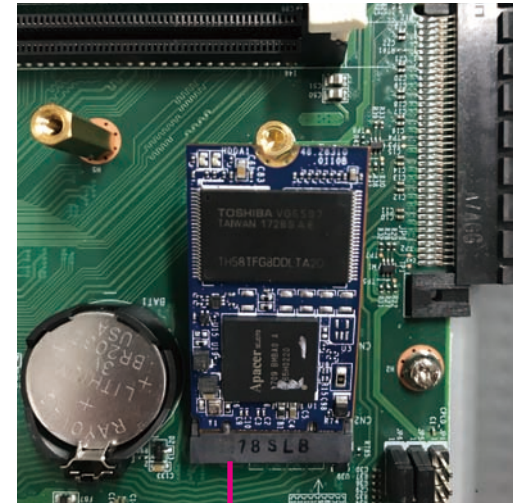

M.2 Slot

5. Push the M.2 module down and fasten a screw into the copper standoff to secure the module.

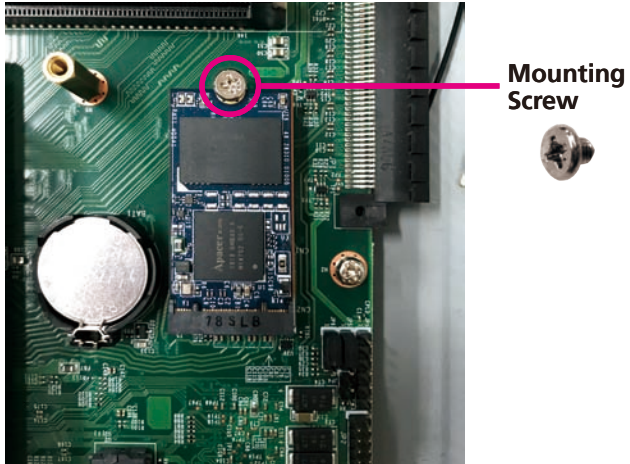

CHAPTER 4: BIOS SETUP

This chapter describes how to use the BIOS setup program for DTA1160. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM website at www.nexcom.com.tw.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

- This program should be executed under the following conditions:
 - When changing the system configuration
 - When a configuration error is detected by the system and you are prompted to make changes to the setup program
 - When resetting the system clock
 - When redefining the communication ports to prevent any conflicts
 - When making changes to the Power Management configuration
 - When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.











 
Entering Setup

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing  allows you to enter Setup.


Legends

Key	Function
	Moves the highlight left or right to select a menu.
	Moves the highlight up or down between sub-menu or fields.
	Exits the BIOS Setup Utility.
	Scrolls forward through the values or options of the highlighted field.
	Scrolls backward through the values or options of the highlighted field.
	Selects a field.
	Displays General Help.
	Load previous values.
	Load optimized default values.
	Saves and exits the Setup program.
	Press <Enter> to enter the highlighted sub-menu


Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu

When “▶” appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press  .

BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from several setup functions and one exit. Use arrow keys to select among the items and press  to accept or enter the submenu.

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.



Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.					
Main	Advanced	IntelRCSetup	Security	Boot	Save & Exit
BIOS Information					
BIOS Vendor	American Megatrends		Set the Date. Use Tab to switch between Date elements.		
Core Version	5.13		Default Ranges:		
Compliance	UEFI 2.6; PI 1.4		Year: 2005-2099		
Project Version	G162T 0.18 x64		Months: 1-12		
Build Date and Time	07/03/2018 11:50:56		Days: dependent on month		
Current BIOS	BIOS1				
Access Level	Administrator				
Memory Information					
Total Memory	4096 MB (DDR4)				
System Date	[Thu 07/12/2018]				
System Time	[14:33:37]		←→: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit		
Version 2.19.1266. Copyright (C) 2018 American Megatrends, Inc.					

Access Level

Displays the access level of the current user in the BIOS.

System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Monday to Sunday. Month displays the month, from 1 to 12. Date displays the date, from 1 to 31. Year displays the year, from 2005 to 2099.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Setting incorrect field values may cause the system to malfunction.



Case Open

Enables or disables the case open detection feature.

Trusted Computing

This section is used to configure Trusted Platform Module (TPM) settings.



Security Device Support

Enables or disables BIOS support for security device. O.S will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

TPM State

Enables or disables the security device.

Pending Operation


Configures the operation mode for the security device.

Device Select

Configures the TPM version.

NCT6683D Super IO Configuration

This section is used to configure the serial port of the super IO.

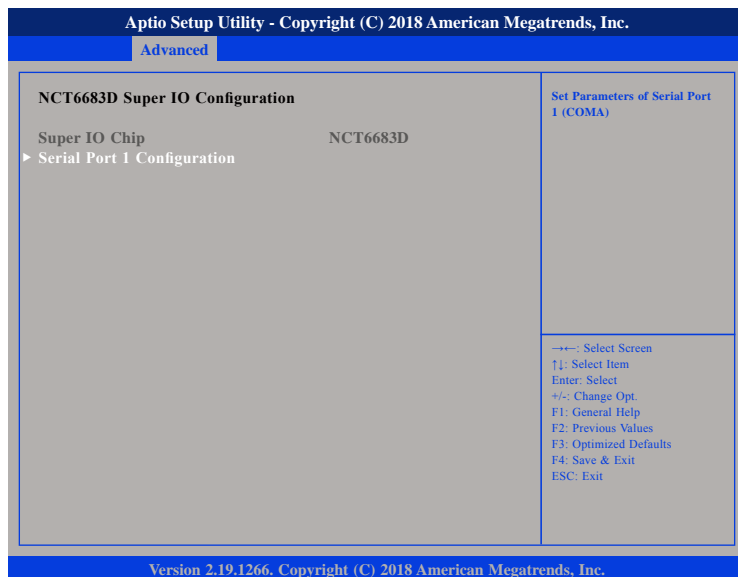

Super IO Chip


Displays the Super I/O chip used on the board.

Serial Port 1 Configuration

Configures the IO/IRQ settings of serial port 1.

Serial Port 1 Configuration

This section is used to configure serial port 1.

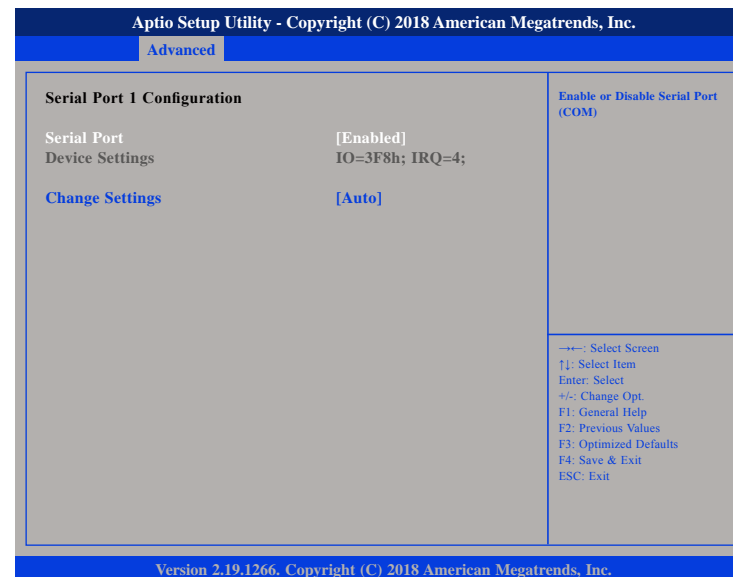

Serial Port


Enables or disables the serial port.

Change Settings

Selects an optimal setting for the Super IO device.

Hardware Monitor

This section is used to monitor hardware status such as temperature, fan speed and voltages.

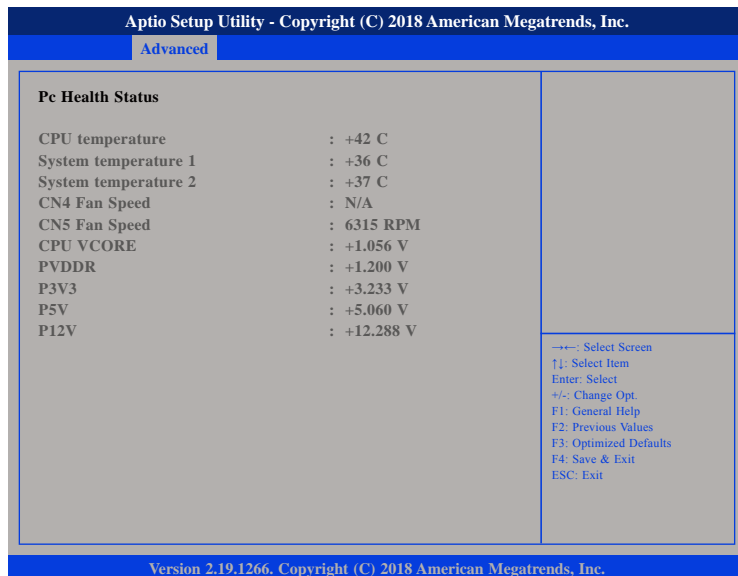

CPU Temperature

Detects and displays the current CPU temperature.

System Temperature 1 and System Temperature 2

Detects and displays the current temperature of the system.

CN4 Fan Speed and CN5 Fan Speed


Detects and displays the fan speed of CN4 and CN5.

CPU VCORE to P12V

Detects and displays the output voltages.

Serial Port Console Redirection

This section is used to configure the serial port that will be used for console redirection.

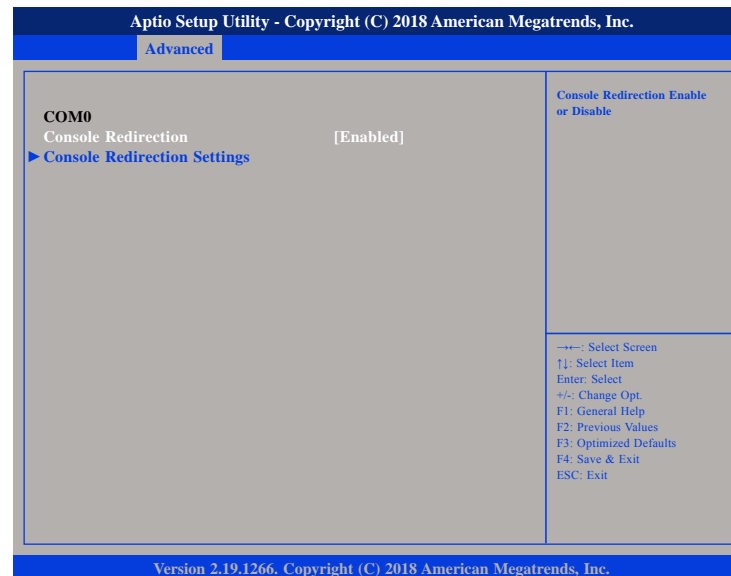


Console Redirection

Enables or disables the console redirection.

Console Redirection Settings

Enables or disables the console redirection. When enabled, Console Redirection Settings will be available.

COM0 Console Redirection Settings

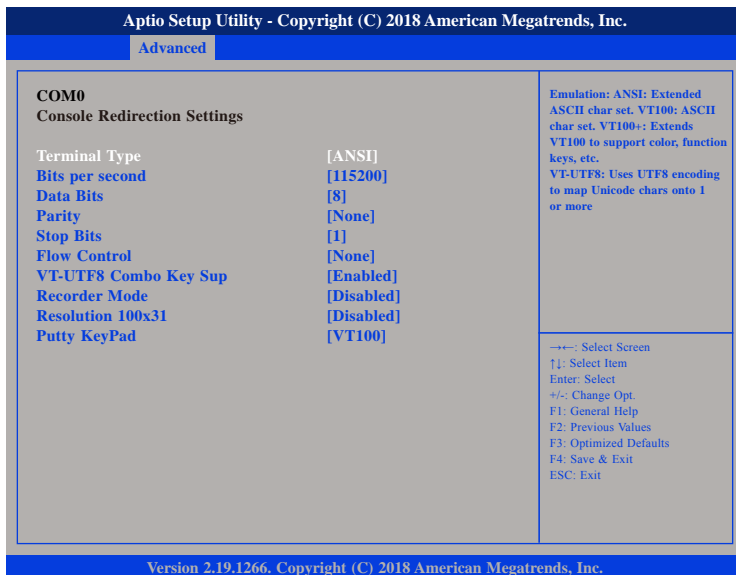

COM0 Console Redirection Settings	
Terminal Type	[ANSI]
Bits per second	[115200]
Data Bits	[8]
Parity	[None]
Stop Bits	[1]
Flow Control	[None]
VT-UTF8 Combo Key Sup	[Enabled]
Recorder Mode	[Disabled]
Resolution 100x31	[Disabled]
Putty Keypad	[VT100]

Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more

←←← Select Screen
↑↓ Select Item
Enter: Select
+/- Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Terminal Type

- ANSI Extended ASCII character set.
 VT100 ASCII character set.
 VT100+ Extends VT100 to support color, function keys, etc.
 VT-UTF8 Uses UTF8 encoding to map Unicode characters onto 1 or more bytes.

Bits Per Second

Selects the serial port transmission speed. The speed must match the other side. Long or noisy lines may require a lower speed.

Data Bits

The options are 7 and 8.

Parity

A parity bit can be sent with the data bits to detect some transmission errors.

- Even Parity bit is 0 if the number of 1's in the data bits is even.
 Odd Parity bit is 0 if number of 1's in the data bits is odd.

Stop Bits

Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.

Flow Control

Flow control can prevent data loss from buffer overflow. When sending data and the receiving buffers are full, a "stop" signal can be sent to stop the data flow.

VT-UTF8 Combo Key Support

Enables or disables VT-UTF8 combo key support.

Recorder Mode

When this field is enabled, only text will be sent. This is to capture the terminal data.

Resolution 100x31

Enables or disables extended terminal resolution.

Putty Keypad

Selects the Putty keyboard emulation type.

PCI Subsystem Settings

This section is used to configure the PCI.



SERR# Generation

Enables or disables the PCI device to generate SERR#.

Above 4G Decoding

Enables or disables decoding of 64-bit devices in 4G address space.

SR-IOV Support

Enables or disables SR-IOV support.

PCI Latency Timer

Configures the length of time allowed for the PCI device to control the bus before another takes over.


VGA Palette Snoop

Enables or disables the VGA palette registers snooping.

PERR# Generation

Enables or disables the PCI device to generate PERR#.

PCI Express Settings

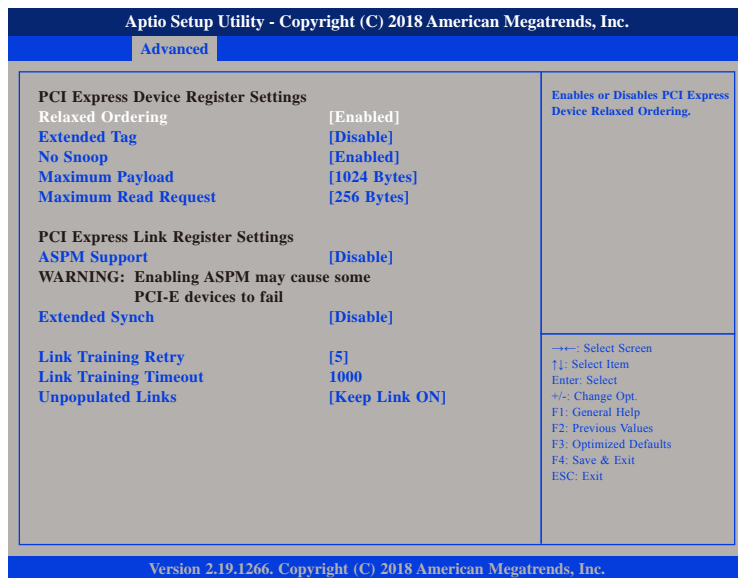

Relaxed Ordering

Enables or disables the PCI Express device's relaxed ordering.

Extended Tag

When this function is enabled, it allows a device to use 8-bit tag field as a request.

No Snoop

Enables or disables the PCI Express device's no snoop option.

Maximum Payload

Selects the maximum TLP payload size of the PCI Express devices.

Maximum Read Request

Selects the maximum read request size of the PCI Express devices.

ASPM Support

Selects the ASPM level.

Force L0 Forces all links to L0 state.

Auto The BIOS automatically selects an ASPM level.

Disable Disables ASPM.

Extended Synch

When this function is enabled, it allows generation of extended synchronization patterns.

Link Training Retry

Selects the number of retry attempts.

Link Training Timeout

Selects the timeout period of link training in microseconds.

Unpopulated Links

Enables or disables unpopulated PCI Express links.

PCI Express GEN 2 Settings



Completion Timeout


Configures the completion timeout value.

Target Link Speed

Configures the PCIe link speed.

Network Stack Configuration

This section is used to configure the network stack.

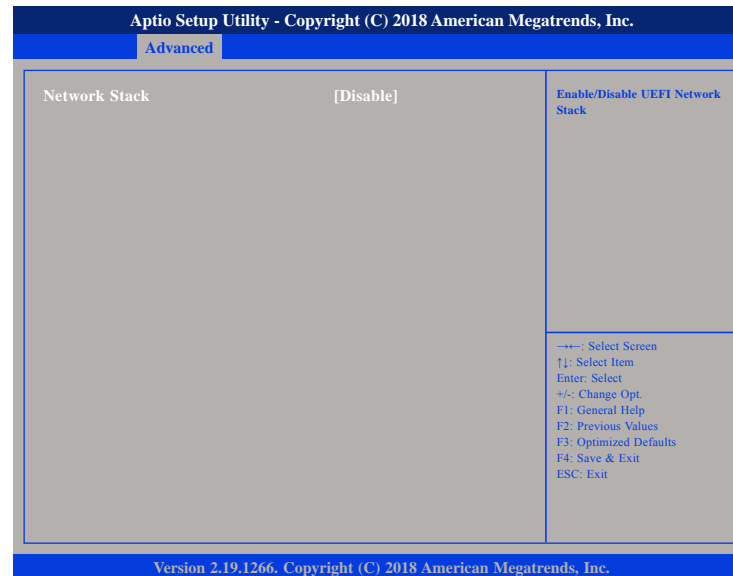


Network Stack

Enables or disables UEFI network stack.

CSM Configuration

This section is used to configure the compatibility support module features.

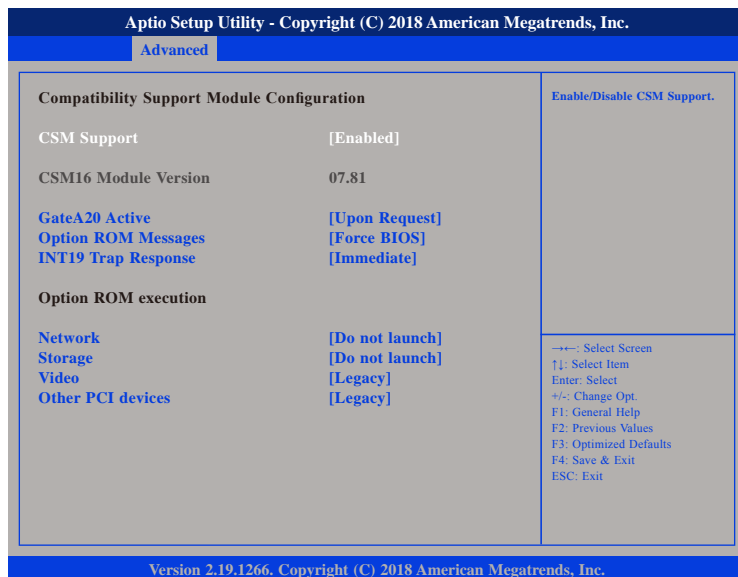

CSM Support

This field is used to enable or disable CSM support, if Auto option is selected, based on OS, CSM will be enabled or disabled automatically.

GateA20 Active

Upon Request GA20 can be disabled using BIOS services.

Always Do not allow disabling of GA20; this option is useful when any RT code is executed above 1MB.

Option ROM Messages

This field is used to set display mode for Option ROM. The options are Force BIOS and Keep Current.

INT19 Trap Response

Allows Option ROMs to trap Interrupt 19 when enabled.

Immediate Execute the trap right away.

Postponed Execute the trap during legacy boot.

Network

Enables or disables the boot option for legacy network devices.

Storage

Enables or disables the boot option for legacy storage devices.


Video

Enables or disables the boot option for legacy video devices.

Other PCI Devices

Enables or disables the boot option for legacy PCI devices.

SDIO Configuration

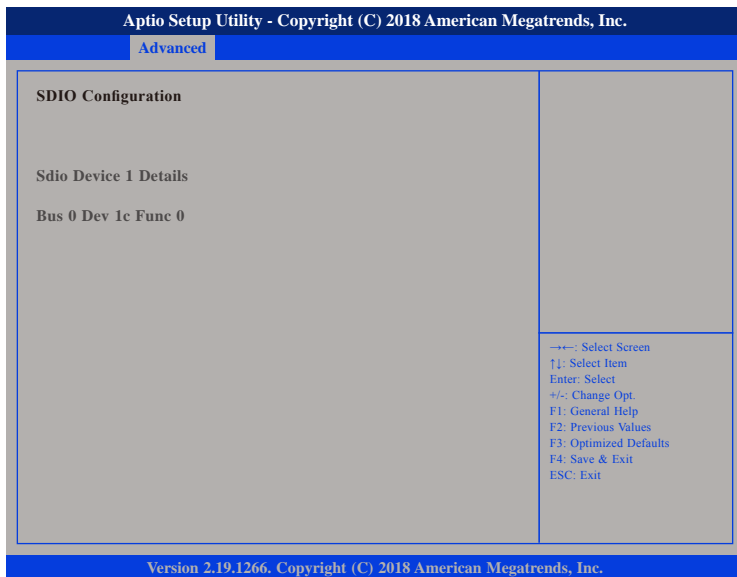

This section displays details of the SDIO device.

USB Configuration

This section is used to configure the USB.



Legacy USB Support

Enable Enables Legacy USB.

Auto Disables support for Legacy when no USB devices are connected.

Disable Keeps USB devices available only for EFI applications.

XHCI Hand-off

This is a workaround for OSs that does not support XHCI hand-off. The XHCI ownership change should be claimed by the XHCI driver.

USB Mass Storage Driver Support

Enables or disables USB mass storage driver support.

Port 60/64 Emulation

Enables the 60h/64h I/O port emulation. You must enable this to fully support USB keyboard legacy for non-USB OSes.

Intel RC Setup


This section is used to configure the processor and chipset settings.



Relax Security Config

Enables or disables the security configuration to be able to use BIOS update tools.

Processor Configuration

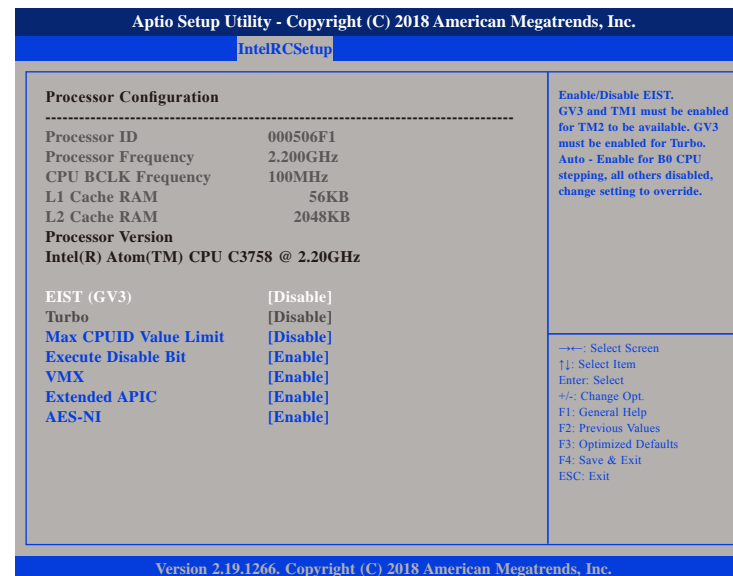

EIST (GV3)

Enables or disables Intel® SpeedStep. GV3 and TM1 must be enabled for TM2 to be available. GV3 must be enabled for Turbo.

Auto - Enable for B0 CPU stepping, all others will be disabled, change setting to override.

Max CPUID Value Limit

Set this field to Disable when using Windows XP. Set this field to Enable when using legacy operating systems so that the system will boot even when it doesn't support CPUs with extended CPUID function.

Execute Disable Bit

When this field is set to Disable, it will force the XD feature flag to always return to 0.

VMX

When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

Extended APIC

Enables or disables extended APIC support.

AES-NI

Enables or disables Intel® AES-NI support.

North Bridge Chipset Configuration




The screenshot shows the BIOS setup utility interface. At the top, it reads "Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc." and "IntelRCSetup". The main content area is titled "North Bridge Chipset Configuration" and is divided into two columns. The left column contains "Memory Information" with the following details: Total Memory (4096 MB), Memory Frequency (DDR4 - 2400 MHz), and Memory Frequency ([DDR-2400]). Below this is a blue arrow pointing to "SSA Config". The right column contains "DDR memory frequency: DDR4 up to DDR-2666" and "DDR3 up to DDR-1867". At the bottom right of the main area, there is a legend for navigation keys: ←→: Select Screen, ↑↓: Select Item, Enter: Select, +/-: Change Opt., F1: General Help, F2: Previous Values, F3: Optimized Defaults, F4: Save & Exit, and ESC: Exit. The footer of the screen reads "Version 2.19.1266. Copyright (C) 2018 American Megatrends, Inc."

Memory Frequency

Configures the DDR memory frequency.


SSA Config

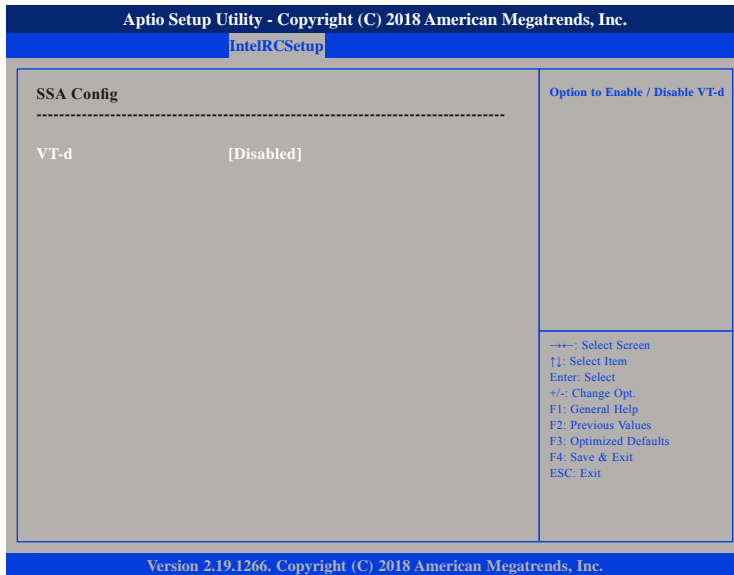

VT-d

Enables or disables Intel® VT-d technology.

South Bridge Chipset Configuration

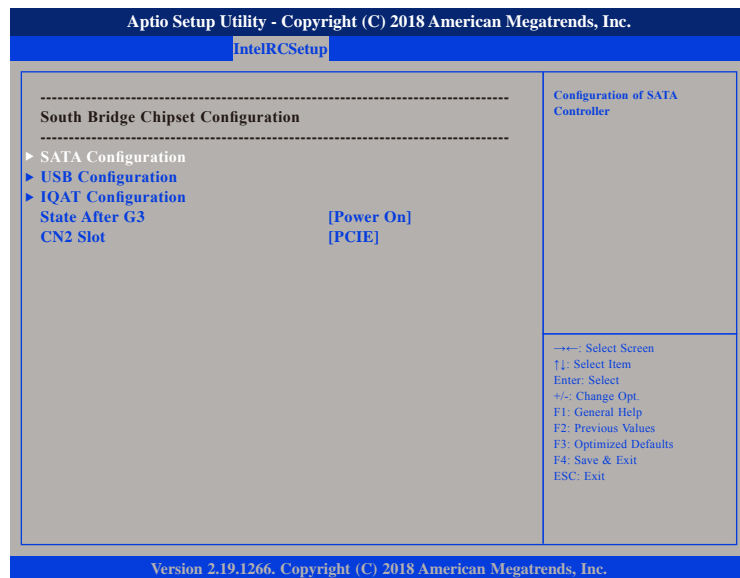

State After G3

Configures which state to use when power is re-applied after a power failure (G3 state).

CN2 Slot

Configuration options for the CN2 slot.

SATA Configuration




SATA 0

Enters the sub-menu of SATA 0 configuration.

SATA 1

Enters the sub-menu of SATA 1 configuration.

SATA 0

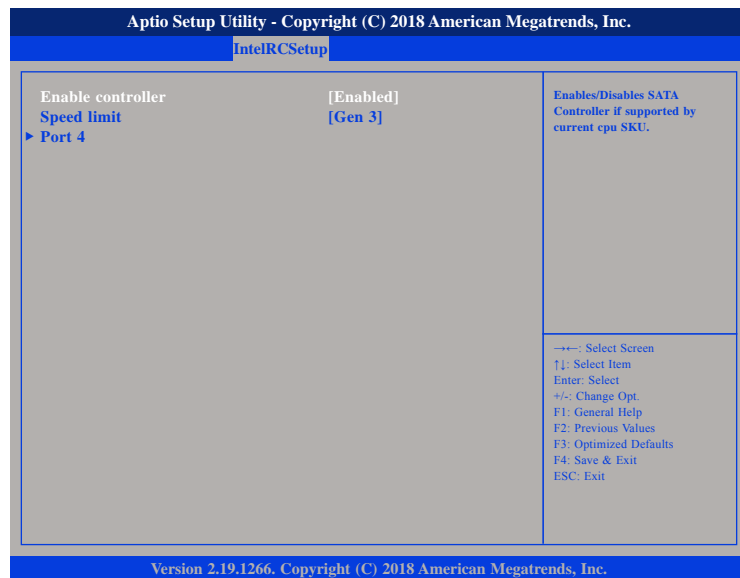


Enable controller

Enables or disables the SATA controller if supported by the current CPU SKU.

Speed limit

Configures the speed limit of the SATA controller.


Port 4

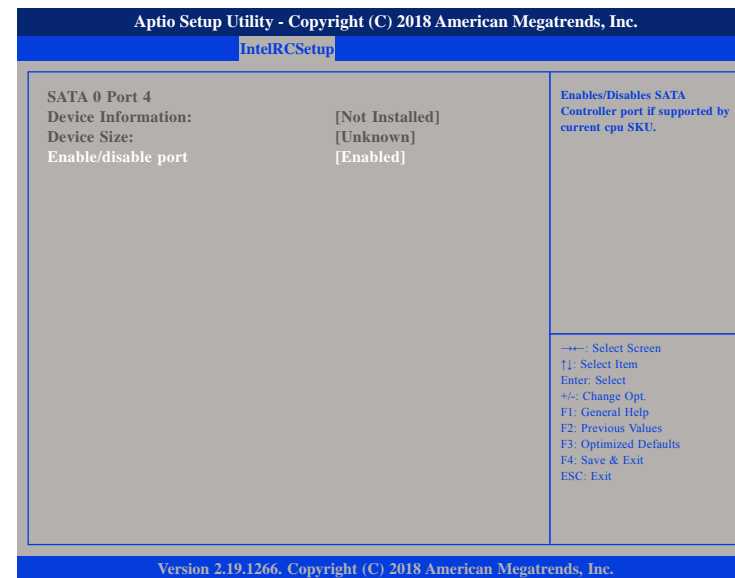

Enable/disable port

Enables or disables the SATA controller port if supported by the current CPU SKU.

SATA 1

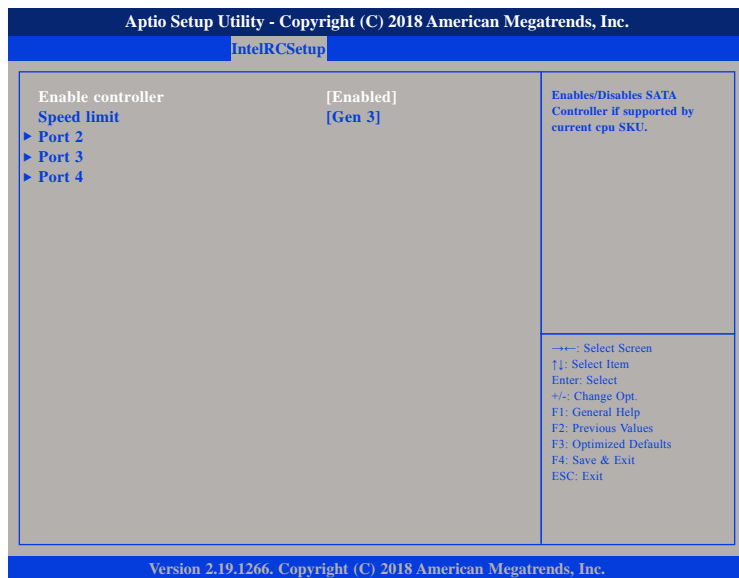


Enable controller

Enables or disables the SATA controller if supported by the current CPU SKU.

Speed limit

Configures the speed limit of the SATA controller.


Port 2

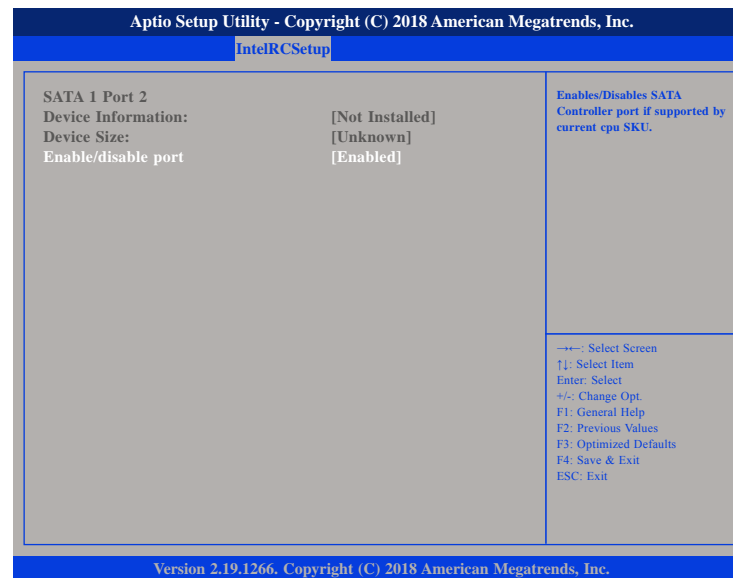

Enable/disable port

Enables or disables the SATA controller port if supported by the current CPU SKU.


Port 3

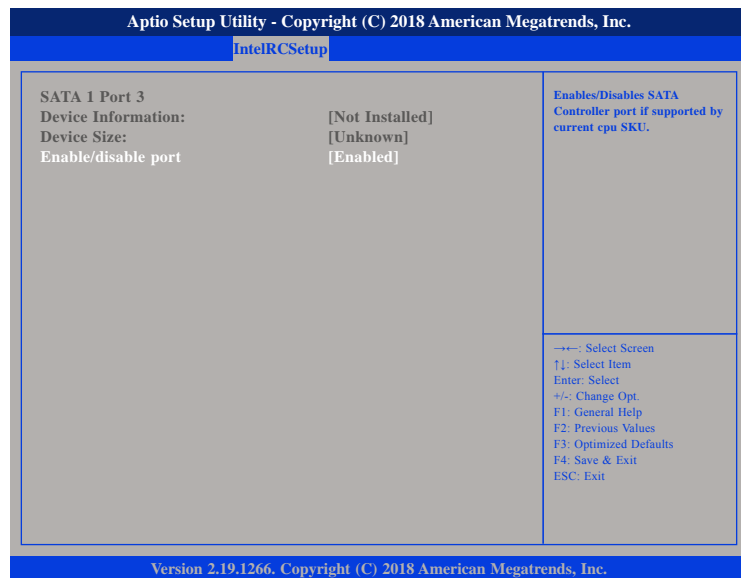

Enable/disable port

Enables or disables the SATA controller port if supported by the current CPU SKU.

Port 4

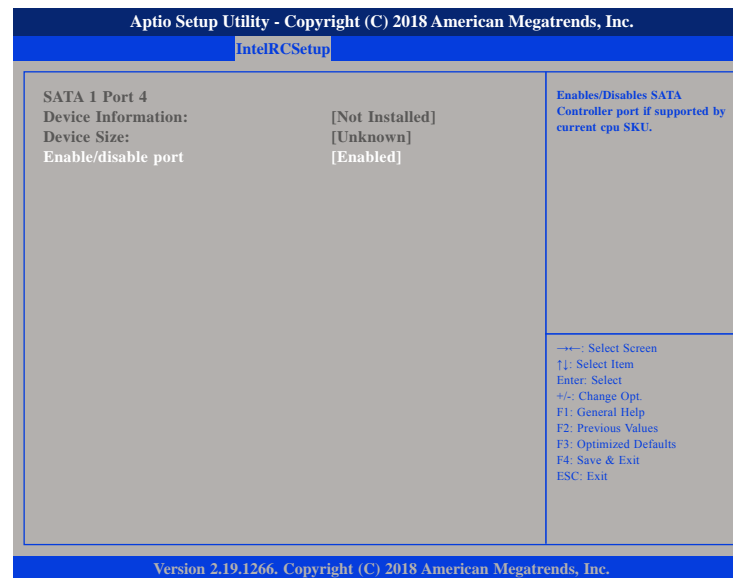

Enable/disable port

Enables or disables the SATA controller port if supported by the current CPU SKU.

USB Configuration




USB SS Configuration

Enters the sub-menu for USB super speed configuration.

USB HS Configuration

Enters the sub-menu for USB high speed configuration.


USB SS Configuration

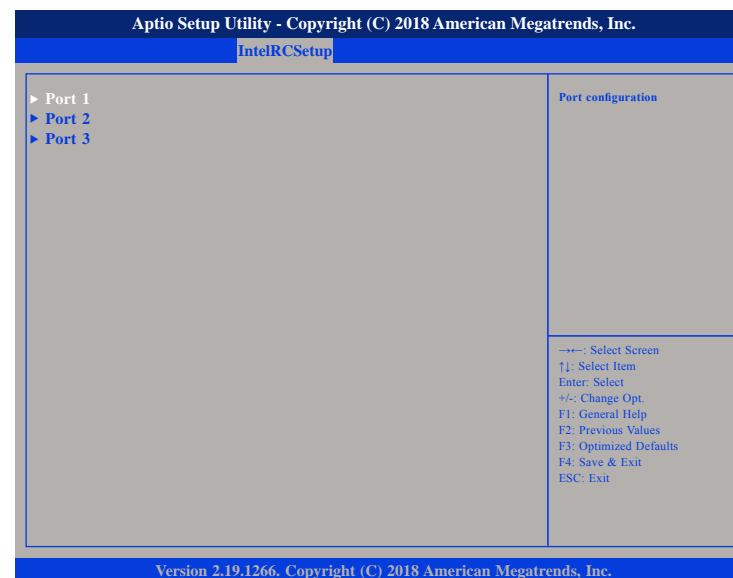

Port 1 to Port 3

Enters the sub-menu for port 1, port 2 and port 3 configuration.


USB SS Port 1

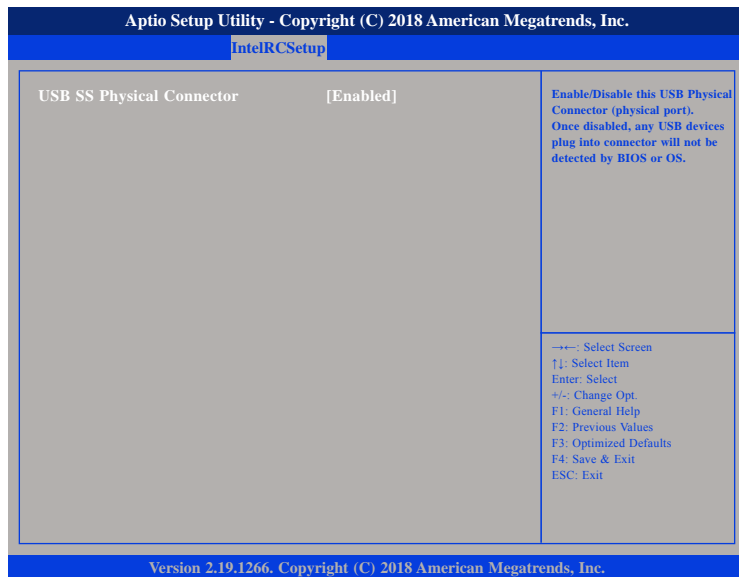

USB SS Physical Connector

Enables or disables the USB Physical Connector (physical port). Once disabled, any USB devices plugged into the connector will not be detected by BIOS or OS.


USB SS Port 2

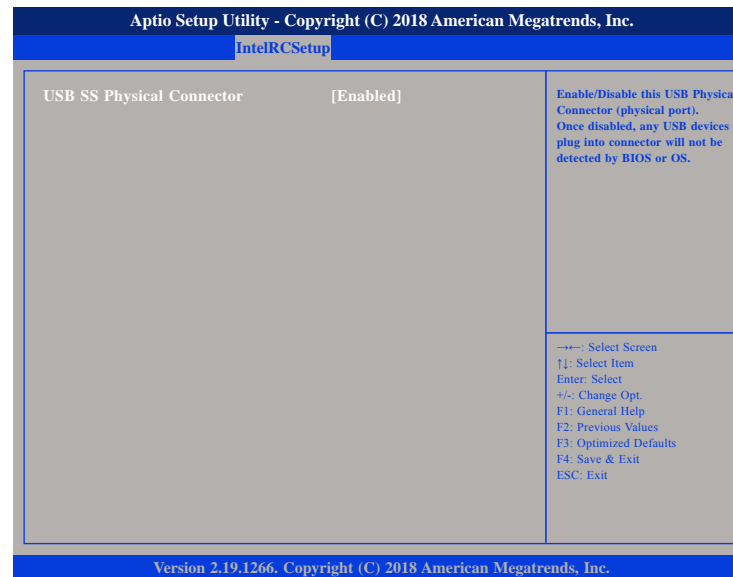

USB SS Physical Connector

Enables or disables the USB Physical Connector (physical port). Once disabled, any USB devices plugged into the connector will not be detected by BIOS or OS.


USB SS Port 3

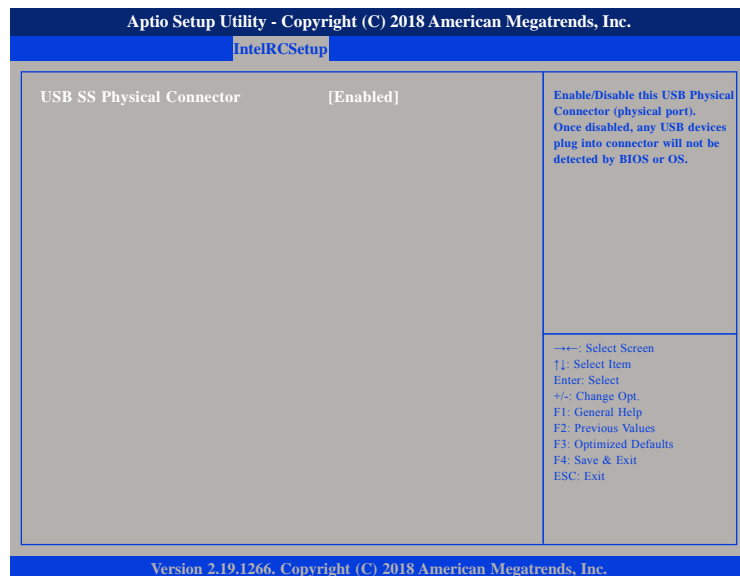

USB SS Physical Connector

Enables or disables the USB Physical Connector (physical port). Once disabled, any USB devices plugged into the connector will not be detected by BIOS or OS.


USB HS Configuration

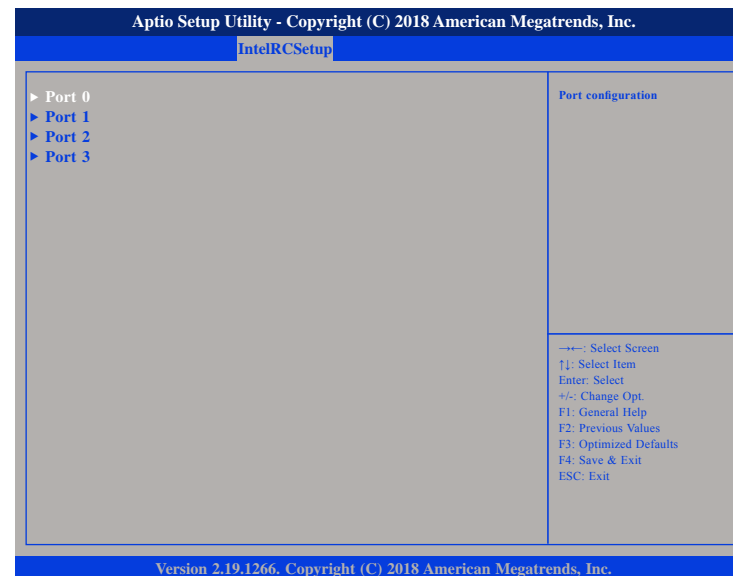

Port 0 to Port 3

Enters the sub-menu for port 0 to port 3 configuration.

USB HS Port 0

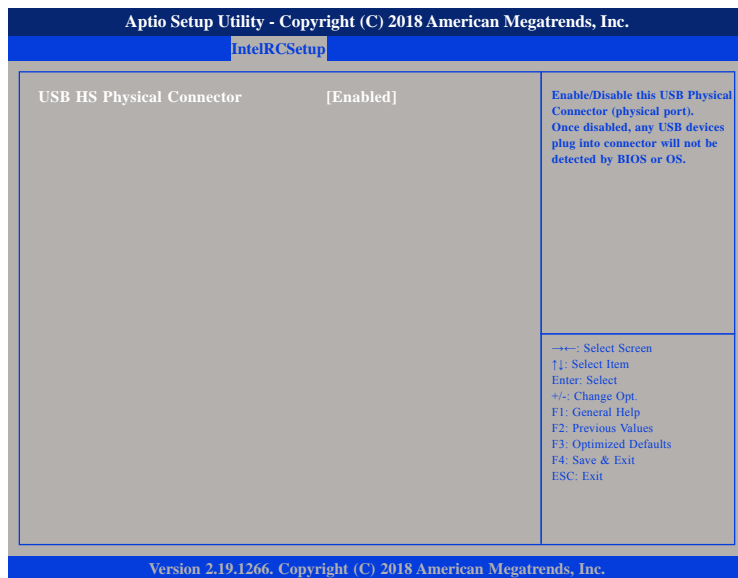

USB HS Physical Connector

Enables or disables the USB Physical Connector (physical port). Once disabled, any USB devices plugged into the connector will not be detected by BIOS or OS.


USB HS Port 1



USB HS Physical Connector

Enables or disables the USB Physical Connector (physical port). Once disabled, any USB devices plugged into the connector will not be detected by BIOS or OS.

USB HS Port 2

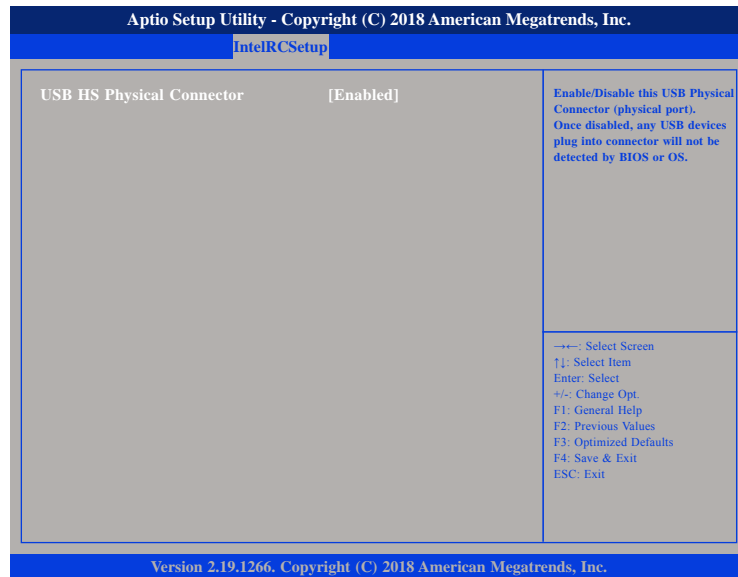

USB HS Physical Connector

Enables or disables the USB Physical Connector (physical port). Once disabled, any USB devices plugged into the connector will not be detected by BIOS or OS.

USB HS Port 3



USB HS Physical Connector

Enables or disables the USB Physical Connector (physical port). Once disabled, any USB devices plugged into the connector will not be detected by BIOS or OS.

IQAT Configuration



IQAT

Enables or disables hiding of IQAT device from an OS.

Set IQAT FUSECTL

Enables or disables the configuration of IQAT FUSECTL register.

Set 64B MRR/MPL

Enables or disables the configuration of 64B MRR/MPL in IQAT DevCTL register.

Security



Administrator Password

Select this to reconfigure the administrator's password.

Boot



Setup Prompt Timeout

Selects the number of seconds to wait for the setup activation key. 65535(0xFFFF) denotes indefinite waiting.

Bootup NumLock State

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

Quiet Boot

Enabled Displays OEM logo instead of the POST messages.
 Disabled Displays normal POST messages.

Boot Mode Select

Configures the boot mode option.

Boot Option #1 to Boot Option #8

Adjust the boot sequence of the system. Boot Option #1 is the first boot device that the system will boot from, next will be Boot Option #2 and so forth.

Save & Exit



Save Changes and Reset

To save the changes and reset, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

Discard Changes and Reset

To exit the Setup utility and reset without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting.

Restore Defaults

To restore the BIOS to default settings, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

Boot Override

To bypass the boot sequence from the Boot Option List and boot from a particular device, select the desired device and press <Enter>.

Launch EFI Shell from filesystem device

To launch EFI shell from a filesystem device, select this field and press <Enter>.